




**SASH + DOOR
HARDWARE**

Fitting and adjustment Instructions
Dynamic 2DC-03




Drilling scheme

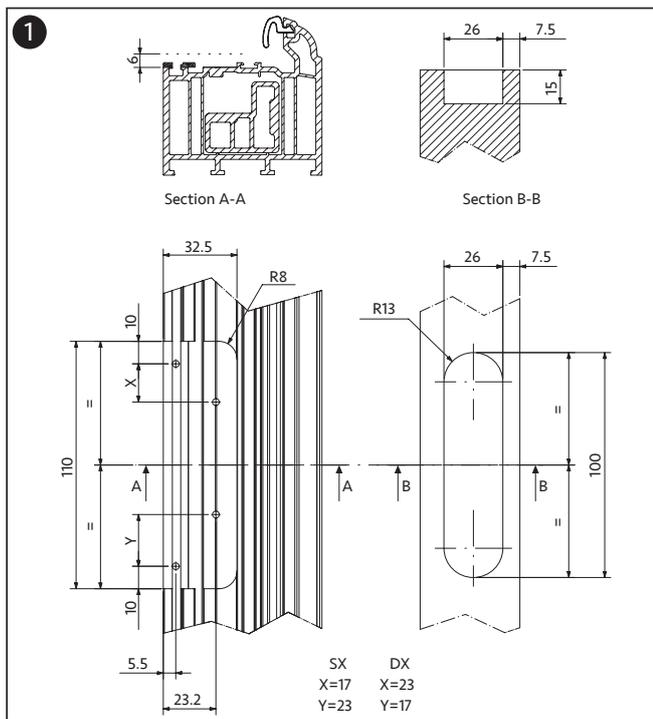


Please verify that the space within your door or window allows the fitting of the hinge as shown in the diagram.

The functionality of the hinge is guaranteed by the correct installation of the door or window.

Drill the holes and mill as shown in the diagram.

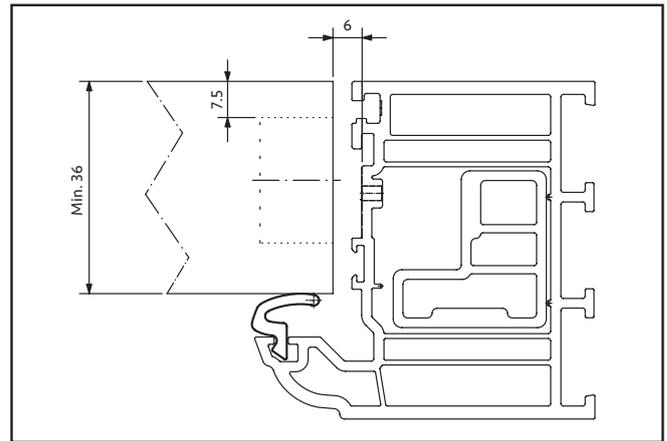


Sash fitting instructions

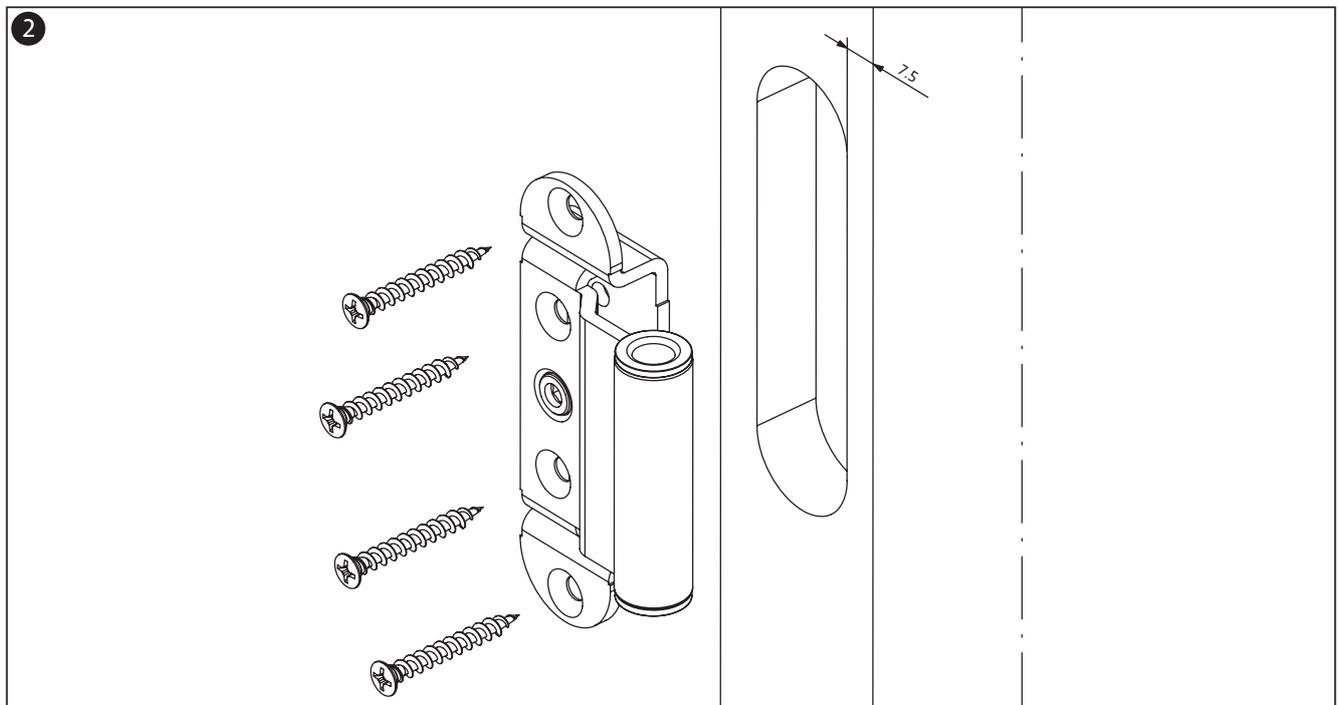


Fasten the sash part into the milling with fasteners suitable for the material of your door or window.

Frame fitting instructions

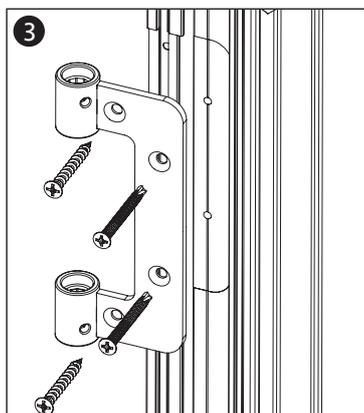


Fasten the frame part with fasteners suitable for the material of your door or window.

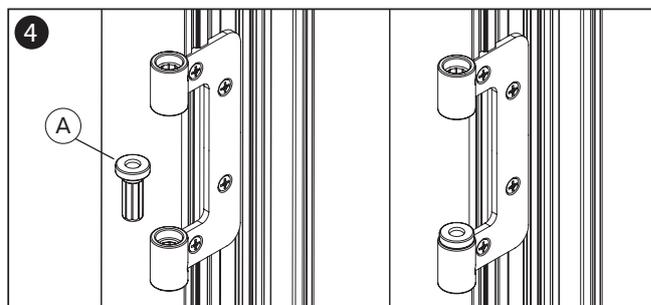

Insert bush (A) into the bottom ring.

Fitting instructions

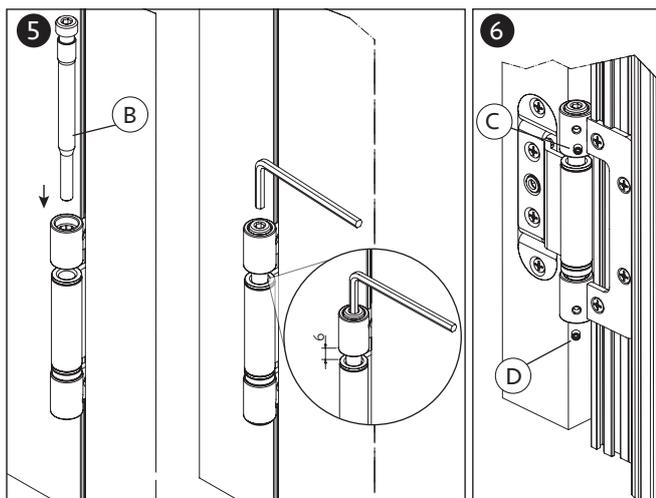


Insert the sash into the frame and screw in the pin marked B with a 4 mm Allen Key till the measure 6mm is reached.

Open the sash and screw in the security screws marked C and D.

Pin removing:
Unscrew screws C and D and unscrew pin B.

Adjustment instructions

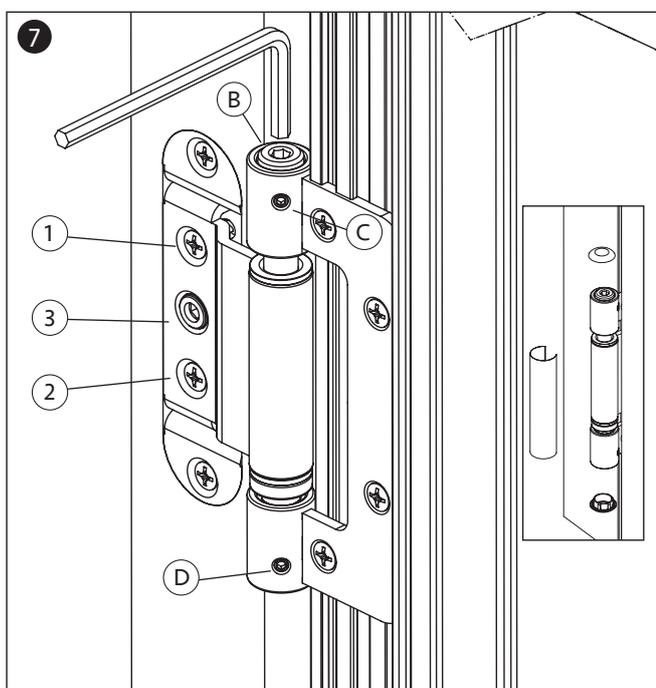

Horizontal adjustment:
unscrew by three turns, screws 1 and 2. Tighten or loosen alternately screw 3 with a 4 mm Allen Key. Tighten screws 1 and 2.
Adjustment $\pm 2\text{mm}$.

Height:
Loosen the screws marked C and D. Turn the pin with a 4mm Allen Key as shown in figure 7.
Adjustment: $-2/+6\text{mm}$.

Insert caps and cover as shown in figure.