


Fixing Instructions

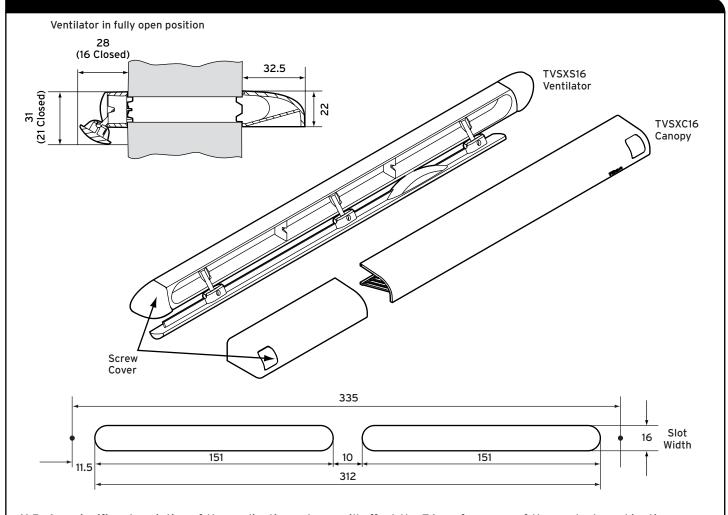

N.B. Any significant variation of the applications shown will affect the EA performance of the product combination.

Fixing Details (Screw Fix)

Instructions

- 1. Prepare slots accurately and pre-drill fixing holes. Avoid glazing rebates and reinforcement.
- 2. Fix vent (with snib on the **right**) and canopy using screws and attach screw covers. **DO NOT OVER TIGHTEN SCREWS!**

Recommended screws:

Vent & Canopy: 3.5mm (No.6) Pan head or equivalent.

We recommend use of silicone sealant along the canopy sealant groove and when necessary on the underside of the ventilator.

If vent supplied with protective cover tape, do not remove tape until authorised.

Other Details		
Dimensions	XS16	XC16
Overall Length	366	364
Equivalent Area (EA) - Screw Fix**	4600mm²	
Free Area (Screw Fix)	4507mm²	4990mm²

^{**} Tested in accordance with BS:EN 13141-1 (2004).

For improved weathering apply silicone here Vent Canopy

^{*} All dimensions in mm unless otherwise stated.