SDH

# SASH + DOOR HARDWARE

**Fitting Instructions**

**Part Numbers:**
QEGE8 - 13.5mm Stack Height
QEGE13 - 13.5mm Stack Height

**Features:**
90º Opening - Throws Sash outside Frame
Easy Clean operation
Heavy Duty
(40KG max. sash weight - 900mm max. sash width)

**Dimensional Data:**

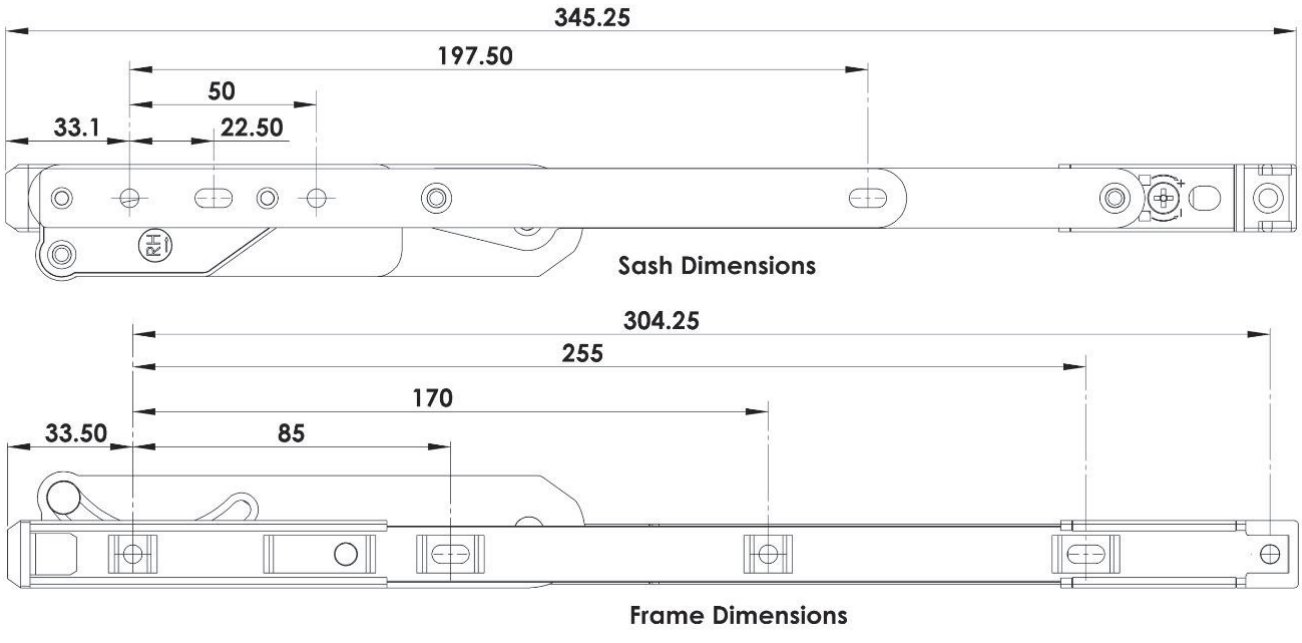


Sash Dimensions




Frame Dimensions

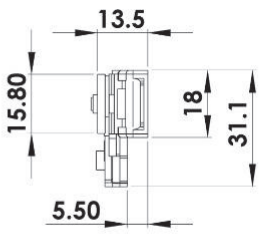


0115-2013-E-135
(13.5mm StackHeight)

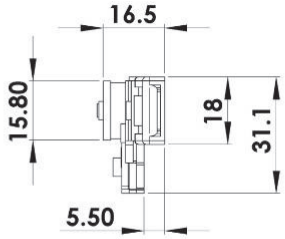


0115-2013-E-165
(16.5mm StackHeight)

**Fitting to Frame:**

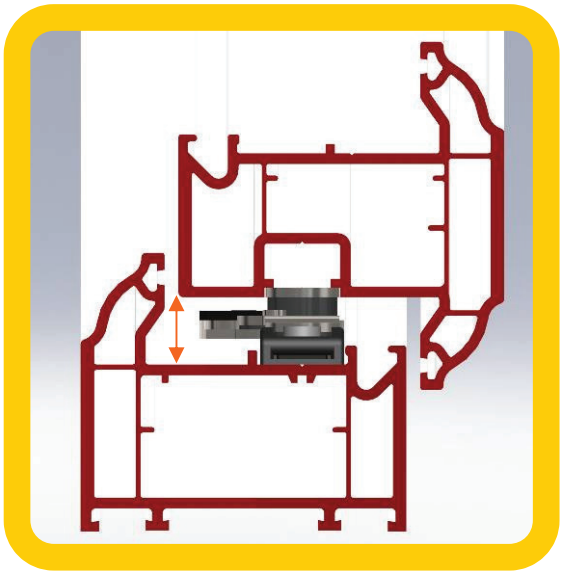

Typical fit into UPVC profile
Available stack heights: 13.5 and 16.5mm

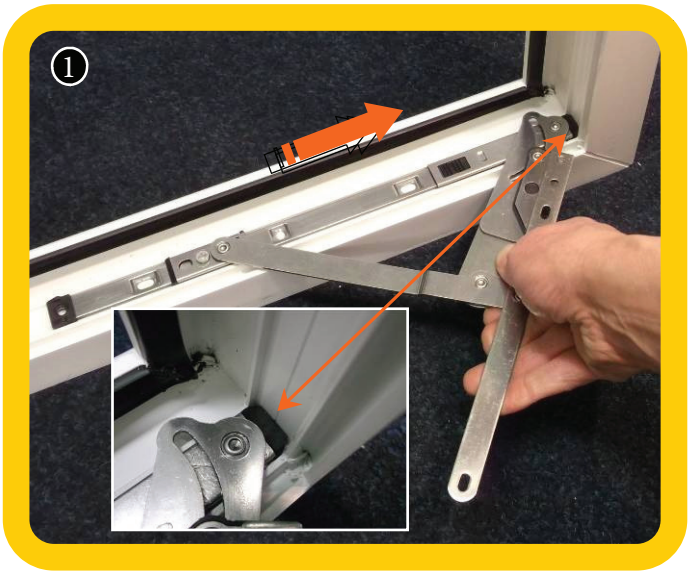


Place hinge onto Frame and push head of hinge into corner as shown

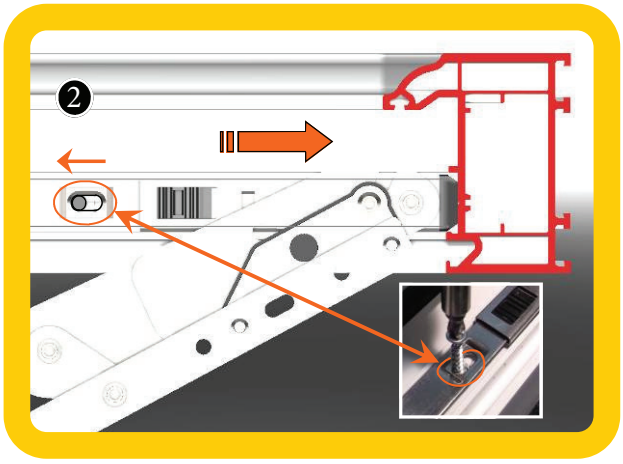


Insert suitable screws into 2 slots at end of slot furthest from head of hinge as shown

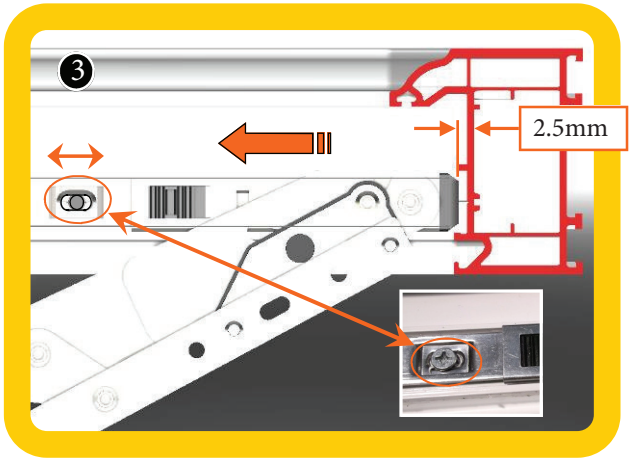


Slide hinge out so that screw is in centre of slot leaving 2.5mm for adjustment if required

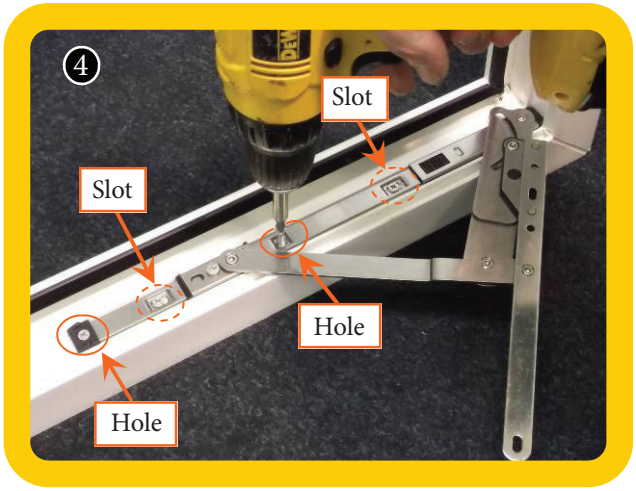


Insert suitable screws into 2 holes as shown

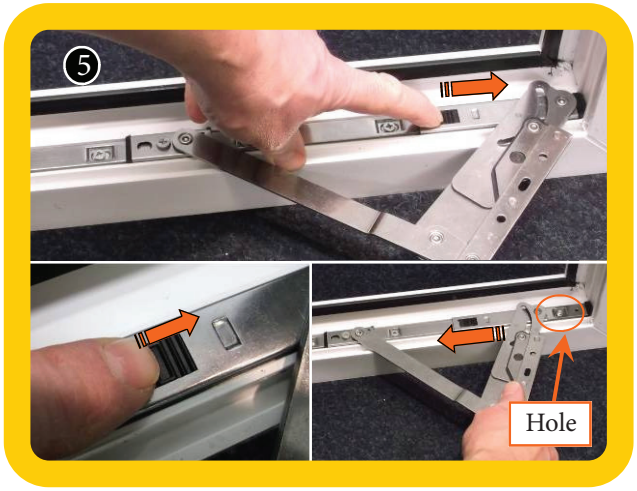


Slide “Easy Clean” activation button and move Top Slider until final screw position is exposed and insert screw

**Fitting to Sash:**

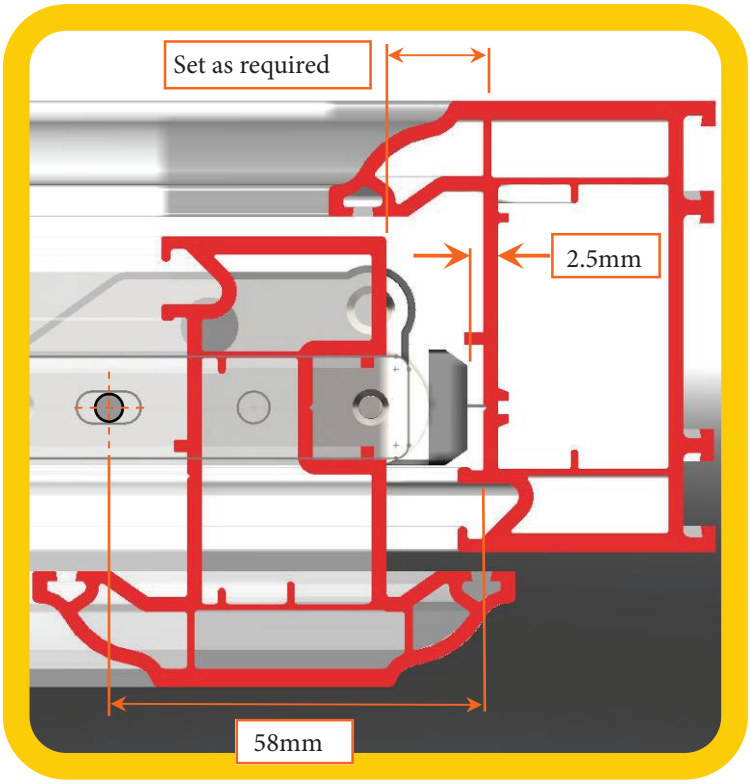


58mm is the distance from Frame to the middle of first slot on Sash.

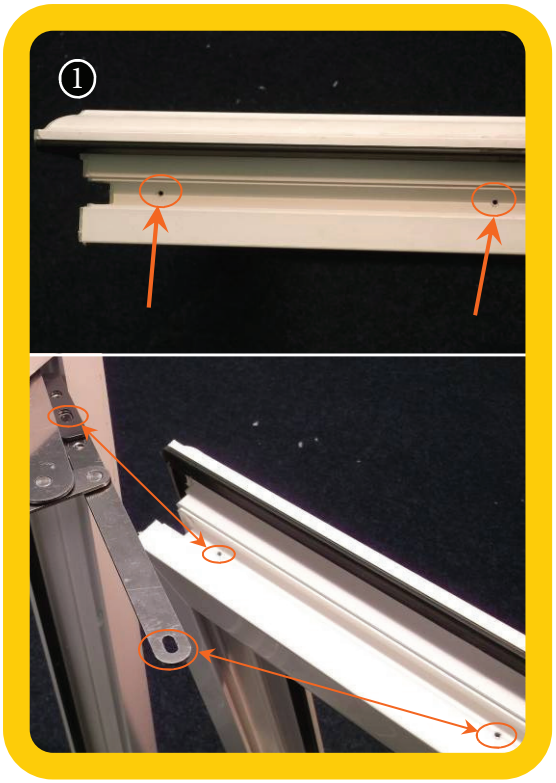


It is recommended that pilot holes are pre drilled at the 2 Slot positions on Sash

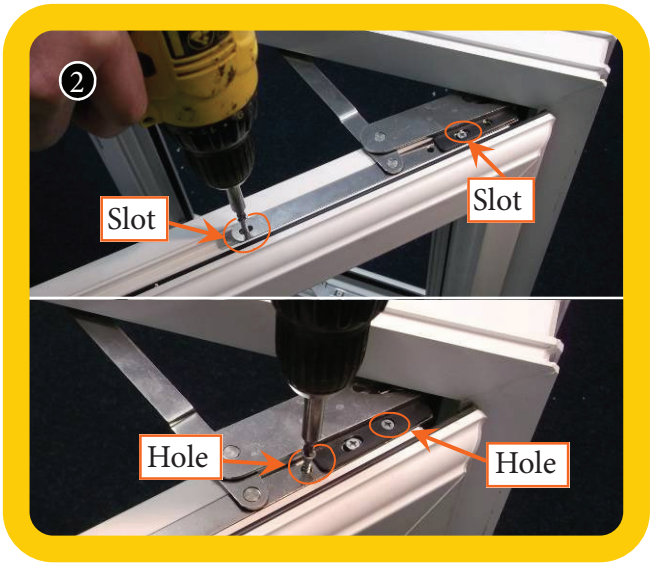


Insert suitable screw into the 2 slots, make adjustments to Sash position if required. then insert screw into the 2 holes

To activate the “Easy Clean” mode push both black slide buttons (top and bottom) towards the corner and slide the Sash away from the corner